 



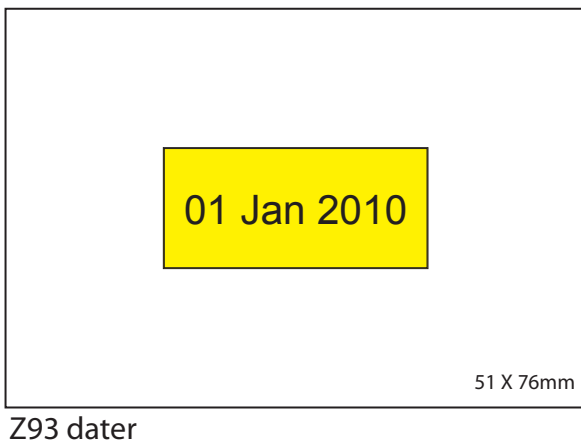
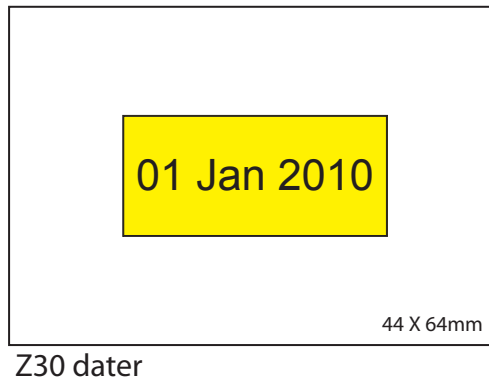


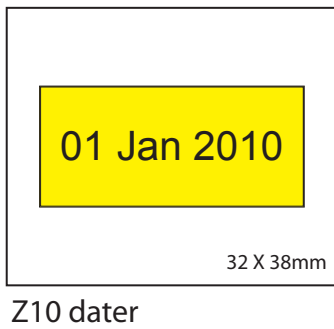


# MaxLight™ Date Stamps

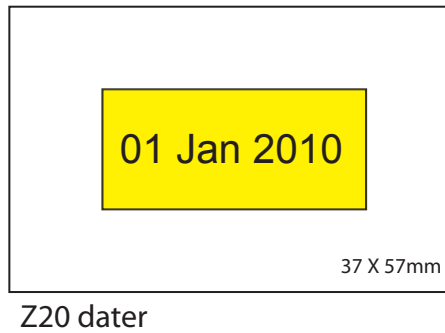

## Date Adjustment:

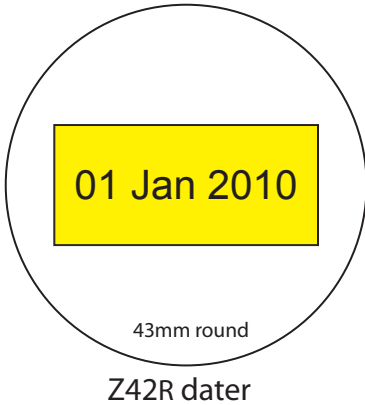

To adjust the date height, remove the cap/handle.

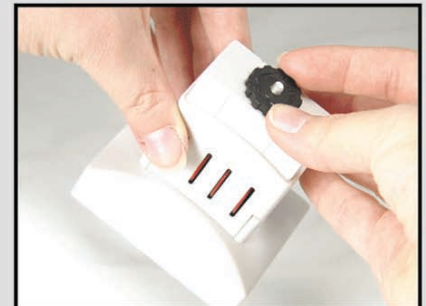

Then twist the wheel to the position you prefer.


## Re-Inking Instructions:



Lift the Dater portion of the stamp out of the Die Plate.



Add ink to the openings on both sides of stamp to re-ink the die plate.

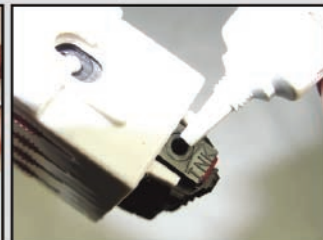

Add ink to the hole labeled "INK" to re-ink the dater portion.

# ASTRONINDUSTRIES